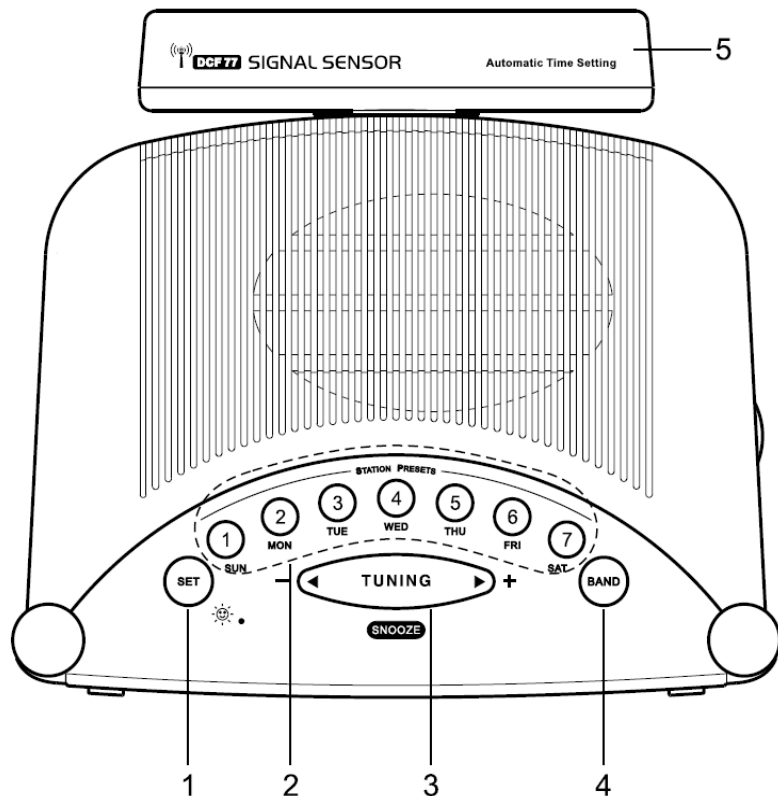 
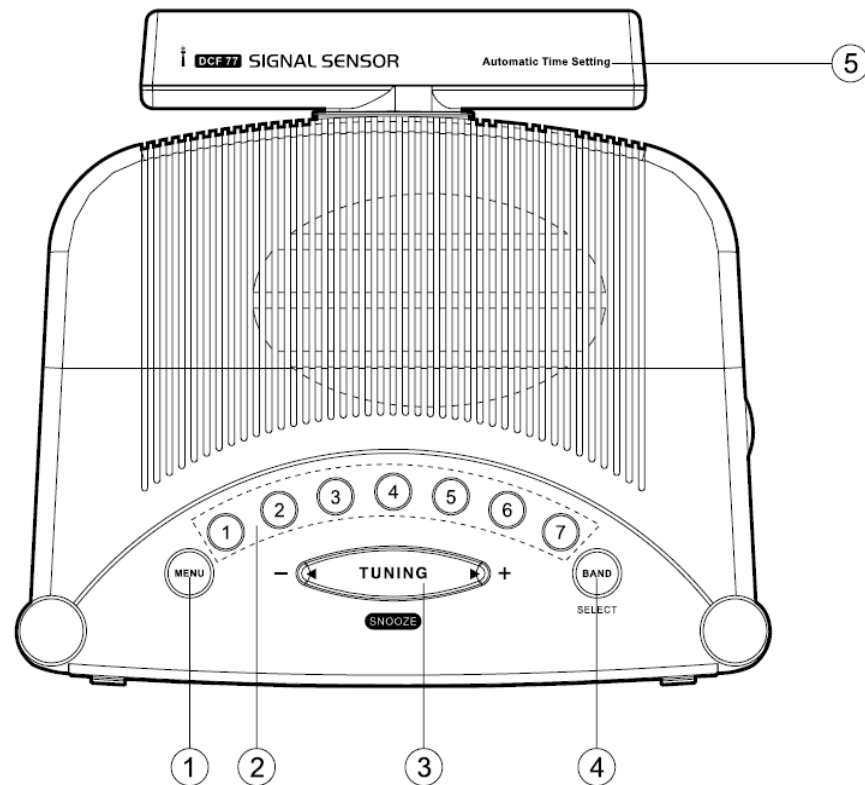 


SANGEAN

means different function between RCR-22 and RCR-22 II.

Top Panel**RCR-22**

Item	Control
1	Time/Date/Alarm set button; Daylight Saving Time (D.S.T.)
2	Preset memories and Alarm days buttons
3	Tuning Up/Down and Snooze button
4	FM/AM (FM/MW) band selection
5	Time capsule


RCR-22 II

Item	Control
1	Menu button
2	Preset button
3	Tuning up / down button / Snooze button
4	Band / Select button
5	Time capsule

 means different function between RCR-22 and RCR-22 II.


Front Panel

 RCR-22

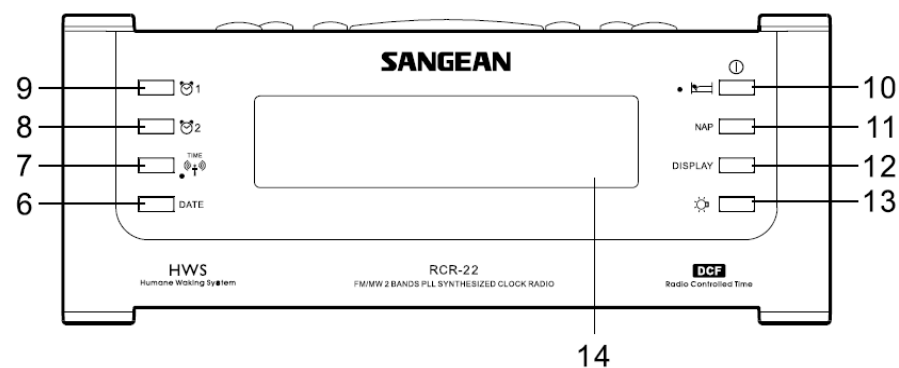

Item	Control
6	Date button
7	Time button, auto time set enforcement
8	Alarm 2 button
9	Alarm 1 button
10	Power button and Sleep timer
11	Nap button
12	Display button
13	Light button
14	LCD display

 RCR-22 II

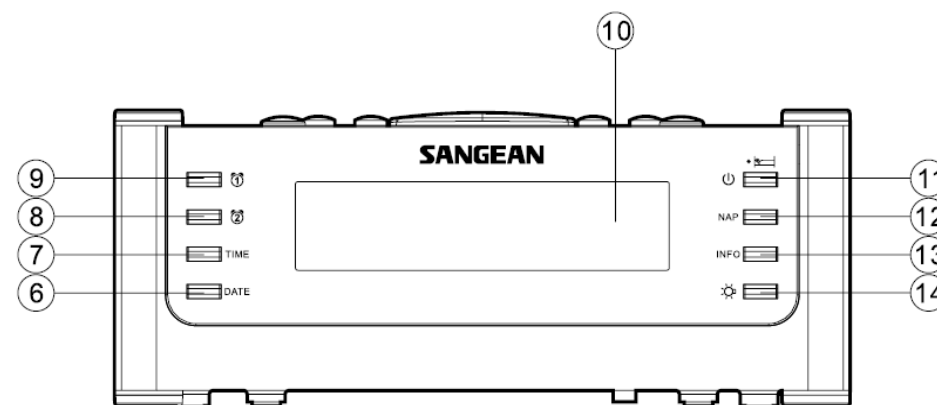


Item	Control
6	Date button
7	Time button
8	Alarm 2 button
9	Alarm 1 button
10	Display
11	Power button / Sleep button
12	Nap button
13	Info button
14	Light button

SANGEAN

means different function between RCR-22 and RCR-22 II.


Bottom

 RCR-22

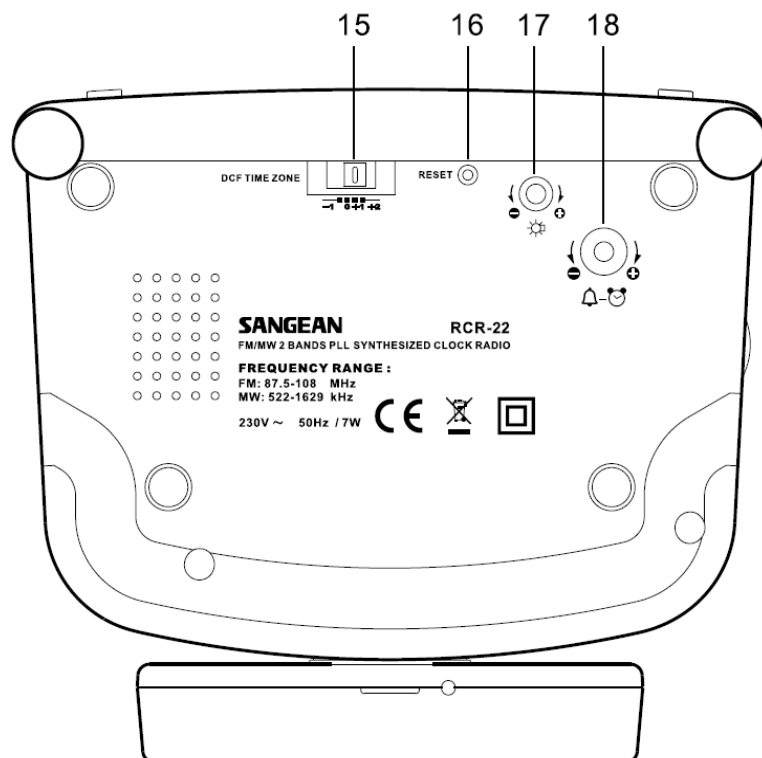

Item	Control
15	Time zone switch
16	Reset button
17	Light level control
18	Alarm sound level control

 RCR-22 II

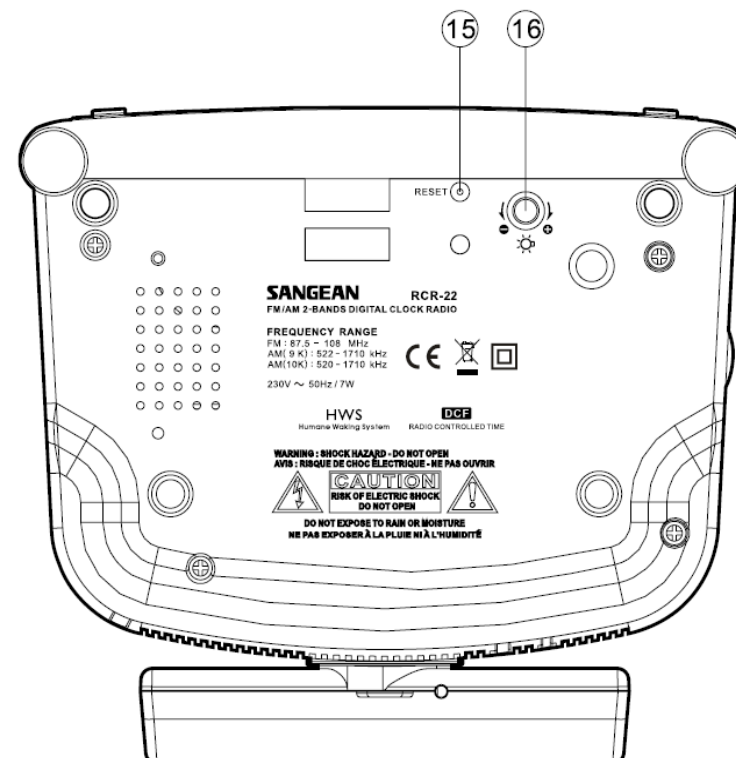


Item	Control
15	Reset button
16	Light level control

means different function between RCR-22 and RCR-22 II.

LCD Display

 RCR-22

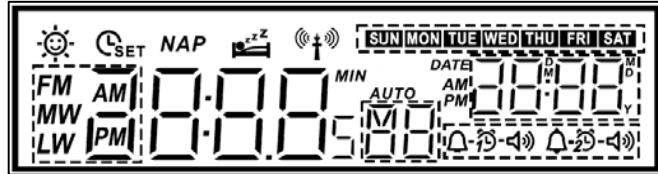

RCR-22 II



Item	Function	RCR-22	RCR-22 II
1	Memory Presets	7 FM / 7 AM	7 FM / 7 AM
2	Display Format	Segment	Segment
3	Display Dimension	102.6(W)*34.0(H)*2.7 MAX (T) mm	102.6(W)*34.0(H)*2.8 MAX (T) mm
4	Alarm Timer	Radio Alarm / Buzzer Alarm	Radio Alarm / Buzzer Alarm
5	Clock Setup	DCF / Manual	DCF / Manual
6	Date Setup	Yes	Yes
7	Hour Format	12H / 24H	12H / 24H
8	DST Setup	Yes	Yes
9	Tuning Step	No	FM - 50/100KHz, AM - 9/10KHz
10	Information Display	Time, Frequency	Station name, Programme Type, Radio text
11	Time Zone Setup	Switch (-1H, 0, +1H, +2H)	Menu (-2H, -1H, 0, +1H, +2H, +3H)
12	AUX socket	Press BAND button	Press BAND button
13	Backlight Adjustment	Yes	Yes
14	Alarm Setup	Alarm Time, Days of week, Buzzer/Radio, Band/Station, Volume	Alarm Time, ONCE/DAILY/WEEKDAY/WEEKEND, BUZZER/FM/AM, Frequency/Preset, Volume
15	Snooze Function	5 minutes	5, 10, 15, 20 minutes
16	Sleep Timer	60, 45, 30, 15, 120, 90 minutes	15, 30, 45, 60, 90, 120 minutes
17	Nap Timer	10 - 120 minutes / 10 minutes step	Nap button: 5 - 120 minutes / 5 minutes step Tuning button: 1 - 120 minutes / 1 minute step
18	Software Version	No	Yes
19	Menu Option	No	Yes
20	Factory Reset	Back to default	FACTORY RESET IN MENU - Back to default RESET switch on the bottom - Real Time reset
21	Headphone Use	Yes	Yes
22	Power output	220-230 Volt/50-60 Hz	230 Volt/50Hz